



Engine (Ignition) Switch

With the electronic key on your person, the engine can be started by simply pressing the “ENGINE START STOP” switch, while depressing the brake pedal.
(The mechanical key cannot be used to start the engine.)

n Starting the engine



Make sure the parking brake is set and the shift lever is in P.


- 1 Depress the brake pedal.
The “ENGINE START STOP” switch indicator light turns green.
- 2 Press the “ENGINE START STOP” switch.

n Stopping the engine

- 1 Set the parking brake and shift the shift lever to P.
- 2 Press the “ENGINE START STOP” switch.

n Changing “ENGINE START STOP” switch mode

To change the “ENGINE START STOP” switch mode without turning on the engine, press the “ENGINE START STOP” switch without depressing the brake pedal. The mode can be changed in the following order:

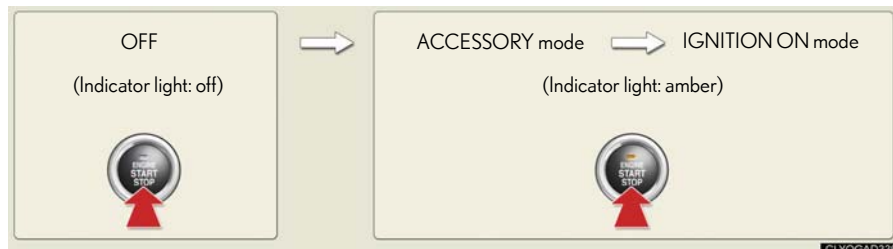

Automatic Transmission

n Shift positions



- P Park
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- S S mode

← The vehicle can only be shifted out of P when the "ENGINE START STOP" switch is in IGNITION ON mode and the brake pedal is depressed.

n S mode

S mode allows the driver to select the shift range manually based on driving conditions.



1 Shift the shift lever to S.



2 To upshift: shift the shift lever toward "+".
To downshift: shift the shift lever toward "-".

The selected shift range is displayed on the instrument cluster.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...



Intuitive Parking Assist (If Equipped)

The system uses a screen display and buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

n Turning the system on and off




- 1 Press the menu switch
- 2 Press the “ENTER” switch upwards or downwards until the Intuitive parking assist-sensor mark appears in the multi-information display.



- 3 Press the “ENTER” switch to select on/off.

Press the menu switch to change to the normal display.

n Screen display

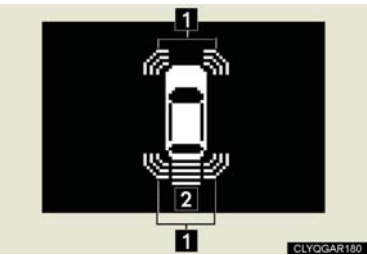

Sensors are used to detect obstacles near the vehicle. The distance to a detected obstacle is shown by the number of indicator bars.

- 1 Indicates obstacles detected by the corner sensors
- 2 Indicates obstacles detected by the back sensors

Multi-information Display and Switch

The multi-information display shows information about your vehicle, including the items shown below.

Multi-information switch



- 1 Menu switch**
Changes modes to electronic features control mode, customization mode or back to normal display mode.
- 2 "ENTER" switch**
Changes trip information items. This switch is also used to turn on/off electronic features controls and to change customization settings.

Display contents



Trip information contents

- 1** Current fuel consumption
- 2** Average fuel consumption after refueling
- 3** Average fuel consumption
- 4** Average vehicle speed
- 5** Driving range
- 6** Multi-information display OFF
- 7** Eco Driving Indicator Zone Display

Switching display items

Pressing the "ENTER" switch upwards or downwards.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...




Electronic features control contents	Setting electronic features controls
1 Intuitive parking assist-sensor*	→P. 21
2 Snow mode	For details, see the Owner's Manual.
3 AFS*	→P. 33

Other contents	Customizing settings and other information to be displayed
Outside temperature	For details, see the Owner's Manual.
Customization	
Dynamic radar cruise control settings*	
Warning message	

*: If equipped

- n When using Intuitive parking assist-sensor or dynamic radar cruise control the appropriate display is shown on the screen.
- n In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Eco Driving Indicator

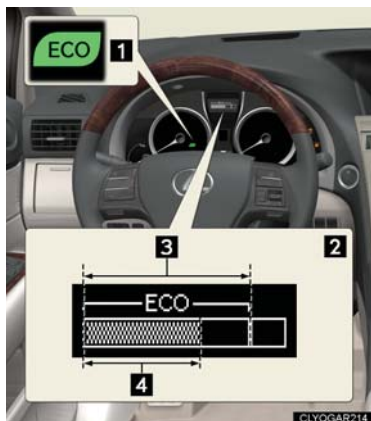

- 1 Eco Driving Indicator Light**
During environment-friendly acceleration operation (Eco driving), the Eco Driving Indicator Light will turn on.
- 2 Eco Driving Indicator Zone Display**
Suggests Eco driving range with current Eco driving ratio based on accelerator pedal operation.
- 3 Zone of Eco driving**
- 4 Eco driving ratio based on accelerator pedal operation**
Vehicle to exceed the Eco driving range, the right of Eco Driving Indicator Zone Display will blink and Eco Driving Indicator Light will turn off.

Parking Brake



To set the parking brake: firmly depress the parking brake pedal.

To release the parking brake: depress the parking brake pedal again.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving


Driving Comfort

Opening and Closing

What to do if ...



Turn Signal Lever

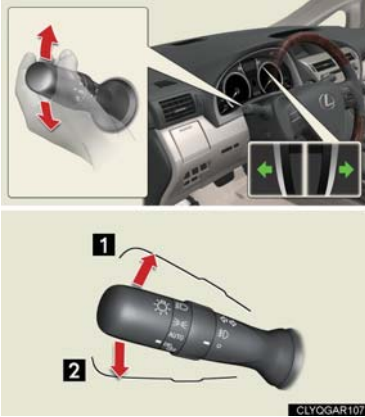

- 1 Right turn signal
- 2 Left turn signal

To signal a lane change, move the lever partway and hold.

Emergency Flasher Switch



Engaging the emergency flasher switch causes all the turn signal lights to flash.

The emergency flashers can be operated even when the "ENGINE START STOP" switch is OFF.

Cruise Control (If Equipped)

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.



- 1 Indicator
- 2 Display
- 3 Cruise control switch

n Setting the speed



- 1 Press the "ON-OFF" button.
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.
This sets the speed in the cruise control memory.

n Canceling



- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

n Adjusting the speed setting



To increase speed: push the lever up.
To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...



Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.



- 1 Indicator (vehicle-to-vehicle distance control mode)
- 2 Indicator (constant vehicle speed control mode)
- 3 Display
- 4 Distance switch
- 5 Cruise control switch

n Cruise control display



Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

n Vehicle-to-vehicle distance control mode



- 1 Press the "ON-OFF" button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Vehicle-to-vehicle distance can be adjusted using the distance switch.

n Constant speed control mode



- 1 Press the "ON-OFF" button.
- 2 Push the lever forward and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

n Canceling



- 1 To temporarily cancel the dynamic radar cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

n Adjusting the speed setting



- To increase speed:** push the lever up.
To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...



Head-up Display (If Equipped)


The head-up display can be used to project vehicle speed and other information onto the windshield.

n Head-up display main switch button



- 1 Pressing the button turns the Head-up display on/off and changes the vehicle speed display units.
- 2 Adjusting display contrast
- 3 Adjusting display position

n Head-up display contents

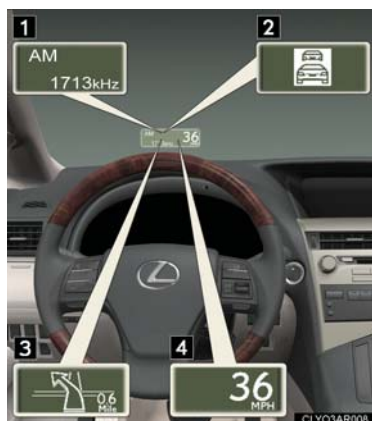

- 1 Audio display
- 2 Dynamic radar cruise control (if equipped)
- 3 Turn-by-turn navigation*
- 4 Vehicle speed display

- n When using audio system or navigation system the appropriate display is shown on the screen.
- n In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the head-up display.
- n Pressing and holding the head-up display main switch button for more than 2 seconds changes the display to audio display on/off mode. Press the head-up display main switch button to turn the audio display on/off.
- n The head-up display may seem dark and hard to see when viewed through sunglasses. Adjust the brightness of the head-up display or remove your sunglasses.

*: Refer to "Navigation System Owner's Manual".



Electronically Modulated Air Suspension (If Equipped)

The electronically modulated air suspension allows the driver to control vehicle height in order to adjust for driving conditions. Select the desired height with the height select switch.

n Selecting a height mode



To select a height mode, press \wedge or \vee on the height select switch for approximately 1 second.

HI mode: for driving on bumpy roads

N mode: for ordinary driving

LO mode: for sporty driving

Luggage mode: for easy luggage loading/unloading



n Turning the height control on and off



To cancel the height control, press the height control off button. A message will appear on the multi-information display, and the vehicle height is fixed.

To turn the height control on, press the button again. When the vehicle's speed exceeds 19 mph (30 km/h), the height control turns on automatically.